
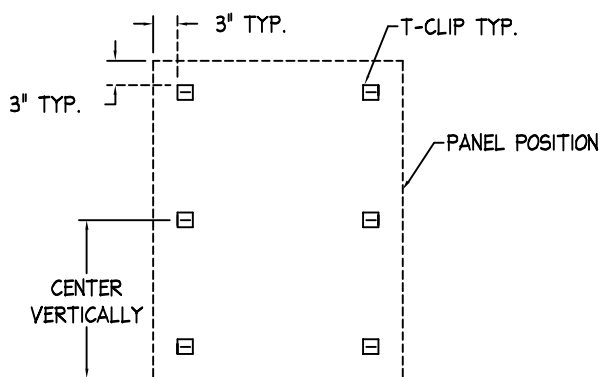
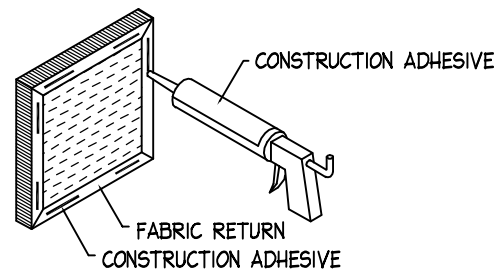


NOTE: ANGLE OF PRONGS MAY REQUIRE ADJUSTMENT PRIOR TO INSTALLATION

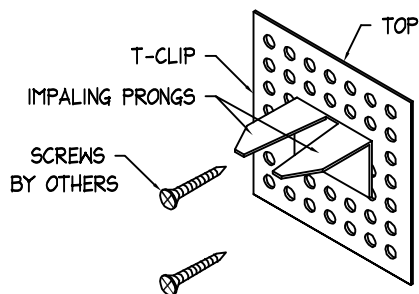

- DETERMINE WHERE PANELS ARE TO BE INSTALLED
- SCREW T-CLIPS INTO PLACE ON WALL PER DETAIL B AND CLIP CHART BELOW
- CLEAN WALL SURFACE AND APPLY CONSTRUCTION ADHESIVE TO PANEL BACK AS SHOWN IN DETAIL C (ADHESIVE TO BE APPLIED TO FABRIC RETURN ONLY.)
- IMPALE PANELS ONTO CLIPS.

PANEL LENGTH	# OF CLIPS
UP TO 24"	4
24" TO 48"	4
48" TO 72"	4 - 6
72" TO 96"	6 - 8
96" TO 120"	8

CLIP PLACEMENT IS APPROXIMATE
NOTE: SEE CHART FOR TYP NUMBER OF CLIPS PER PANEL

INSTALLATION INSTRUCTIONS



TITLE INSTALLATION INSTRUCTIONS
FOR T-CLIP MOUNTING
W/ CONSTRUCTION ADHESIVE

LAST DATE
REVISED
4-27-09

DRAWN BY
ERIC

DRAWING NO. T-DWG
INSTAL03.DWG