



1. DRILL HOLES IN PANEL FRAME AS SHOWN
2. ATTACH Z-BRACKETS TO PANEL WITH 3/16" DIA. BOLT, NUT AND WASHER (BY OTHERS)
3. MOUNT PANEL ON WALL

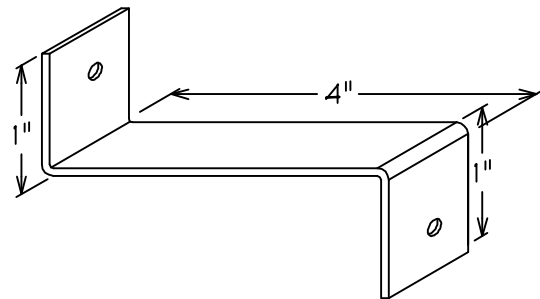

ENLARGED VIEW OF MOUNTING BRACKET

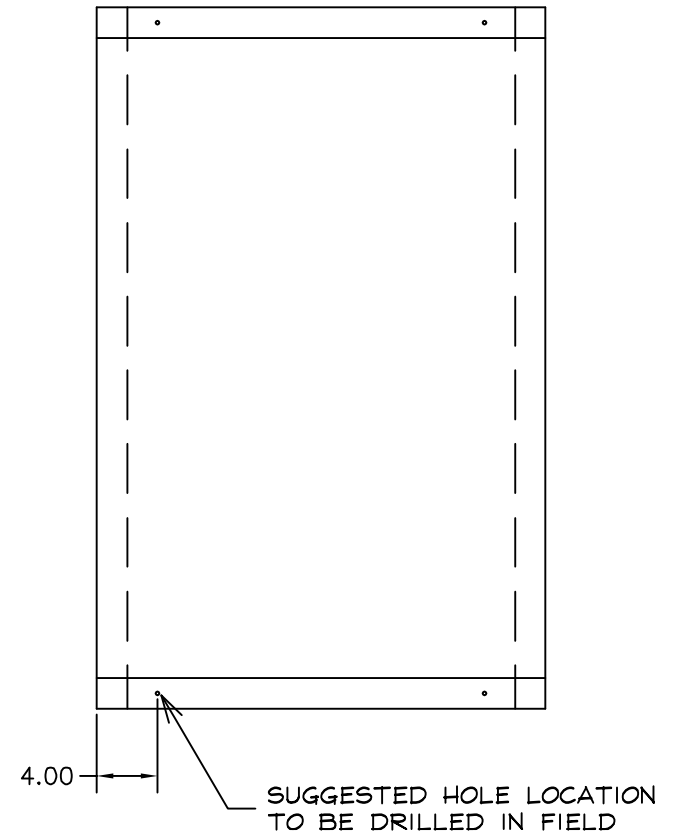

TITLE
**4" OFFSET
 KNP MOUNTING**

LAST DATE
 REVISED
4/23/09

DRAWN BY
JAA

DRAWING NO. **INSTAL19C** T-DWG