



-LOCATE ACOUSTIC WAVE BAFFLE ACCORDING TO ARCHITECT'S PLANS. ATTACH BAFFLE TO METAL CEILING UTILIZING #10 SELF-TAPPING SHEET METAL SCREWS AND FENDER WASHERS (SUPPLIED BY OTHERS) THROUGH GROMMETS PROVIDED IN BAFFLE.

-ON A 30' LONG WAVE BAFFLE, ALLOW A MINIMUM OF 24" DROP AT CENTER OF BAFFLE. CONTACT FACTORY FOR OTHER MOUNTING RECOMMENDATIONS.



EXAMPLE OF 30' BAFFLE INSTALLATION

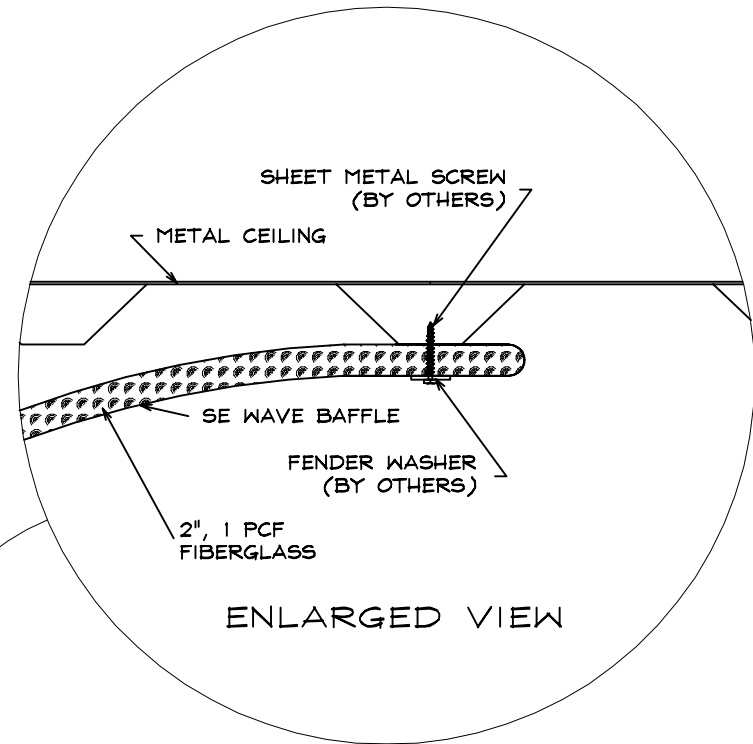

TYPICAL ACOUSTIC WAVE BAFFLE, TOP VIEW
MODEL SE

